

BM PRO RVMASTER

Your system contains differences to what is outlined in your product manual. This guide will detail the differences and ensure you are able to properly operate your system.

Information in this guide overrides information in the product manual.

RVMasterCONTROLLER

1. RVMasterController Touch Screen

2. Cloud Icon

Appears only if the RVMasterController is logged in to the BM PRO cloud.

3. Warning icon

Appears if the power cord has been connected to a faulty power source. Tap the icon for more information.

4. Bluetooth Icon

Appears only if the RVMasterController is paired to the RVMasterNode.

5. Settings Icon

Access to the RVMaster App General Settings.

6. Return Button

Navigate to the previous page.

7. Main Screen Button

Navigate to the RVMasterController's tablet Android screen.

8. Recent Applications Button

Display a list of recently used/background applications on the tablet.

9. Reset Pin Hole

To reset the RVMasterController. Reset the RVMasterController by inserting, for example a paper clip, vertically in the reset pin hole.



PAIRING TO THE NODE

Pairing your RVMasterController, smartphone or tablet to the RVMasterNode is done in two easy steps.

NOTE: The RVMasterController will have been paired to your Node at the factory. You should only need to pair your own device or smartphone to the Node.

While the RVMasterNode can be paired to a total of four devices (including the RVMasterController), you can only pair one device at a time to the RVMasterNode.

1. Launch the App on your phone.
2. Press and hold the physical bathroom light switch for at least 5 seconds. A spinning circular loading indicator will appear in the center of the screen and the pairing process will begin. This could take up to 30 seconds.
3. When pairing is successful, you will be taken to the App home screen and the Bluetooth icon will be visible. 

CONGRATULATIONS, YOU'RE CONNECTED!

For additional support, refer to the **FAQs and Troubleshooting** section of your RVMaster Owner's Manual.

Cannot Pair to the Node

If you are pairing a mobile device to the RVMasterNode and pairing fails, it is likely that four devices are connected to the RVMasterNode simultaneously. To resolve this, close the app on one of the devices that is connected to the RVMasterNode and try again.