 


JCONTROL INSTALL GUIDE

 
The 12V digital battery monitor JControl is a display and control unit that connects to a J35 and displays a range of battery and water tank information. It acts as a fuel gauge by monitoring the current going in and out of the battery. It also displays information such as battery volts, solar and AUX input current, charge and discharge status, remaining battery capacity and water tank levels. JControl can be mounted on any internal wall of your caravan.

1. PARTS

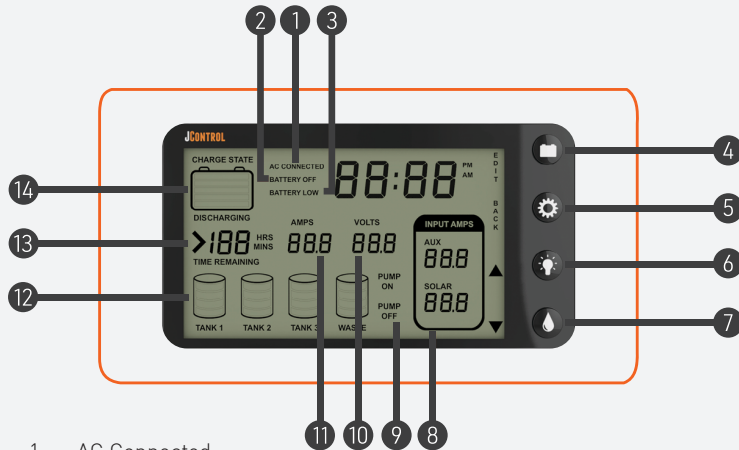

1. AC Connected
2. Battery Off
3. Battery Low
4. Battery Button
5. Settings Button
6. Backlight Button
7. Water Pump Button
8. Input Amps
9. Water Pump Status Indicator
10. Volts
11. Amps
12. Tank Level Indicators
13. Time Remaining
14. Battery Capacity Bar Graph

2. MOUNTING

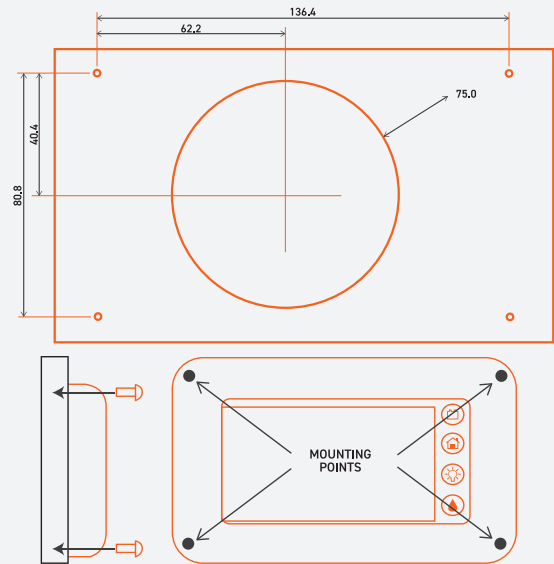


To mount the JControl:

1. Drill holes in the wall for the connectors.
2. Use flat head screws with a maximum diameter of 4.0mm to mount the JControl to the wall.
3. Connect the JControl to the wall using the provided connectors.
4. Attach the provided fascia cover to the JControl.

3. SET UP MODE

 Set-up mode allows you to configure the JControl. To enter Set-up mode, hold down the Settings Button until SET UP is seen on the Amps and Volts display.

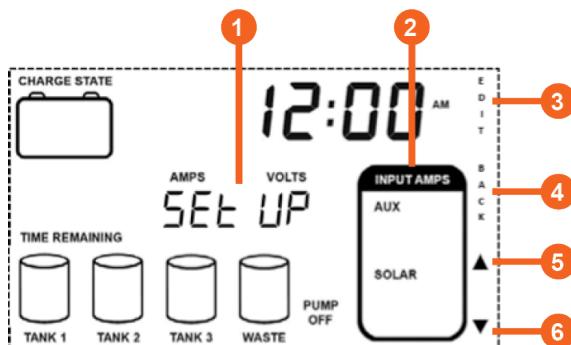

1. & 2. Menu Function Display: Displays various Set-Up menu functions and information.
2. Edit: Use the Battery button to edit.
3. Back: Use the Settings button go back.
4. & 6. Scroll Arrows: Use the Backlight and Water Pump buttons to scroll.

To exit Set-up mode, repeatedly press the Back button.



MANUAL



DATASHEET

 


PRODUCT PAGE

4. CONFIGURING BATTERY CAPACITY

To configure the battery capacity:

1. Enter Set-Up mode.
2. Navigate to the batCaP menu function.
3. Press Edit.
4. Use the Scroll Arrow buttons to set the correct battery capacity.

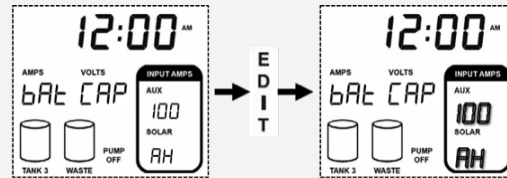


Press ▲▼ to set the correct battery capacity

6. CONFIGURING WATER TANKS

To enable water tank monitoring:

 1. Enter Set-Up mode.
2. Navigate to the tAnKS menu function.
3. Press Edit.
4. Use the Scroll Arrow buttons to select the desired tank.
5. Press Edit.
6. Use the Scroll Arrow buttons to enable or disable the selected tank.

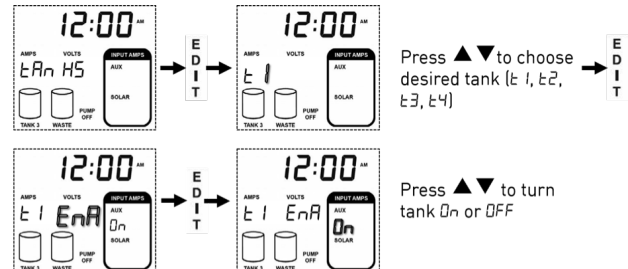


Press ▲▼ to choose desired tank (t1, t2, t3, t4)

Press ▲▼ to turn tank On or OFF

To configure the water tank type:

 1. Enter Set-Up mode.
2. Navigate to the tAnKS menu function.
3. Press Edit.
4. Use the Scroll Arrow buttons to select the desired tank.
5. Press Edit.
6. Use the scroll arrows to change to tYP.
7. Press Edit.
8. Use the Scroll Arrow buttons to set the tank to CLn or dtY.

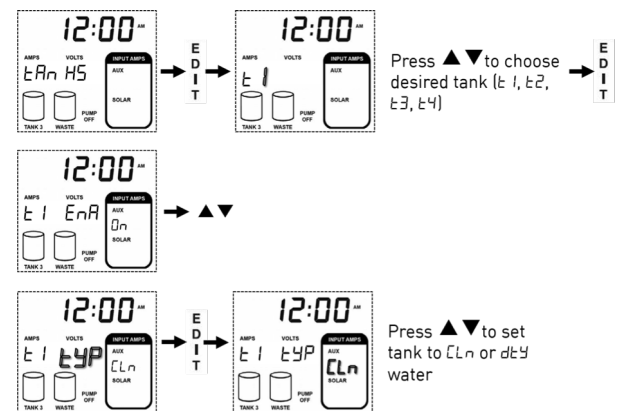


Press ▲▼ to choose desired tank (t1, t2, t3, t4)

Press ▲▼ to set tank to CLn or dtY water

7. CONFIGURING THE CLOCK

To configure the clock for 12-hour time:

 1. Enter Set-Up mode.
2. Navigate to the CLOCK menu function.
3. Press Edit.
4. Press Edit again.
5. Use the scroll arrows to set the hour.
6. Press Edit.
7. Use the scroll arrows to set the minute.

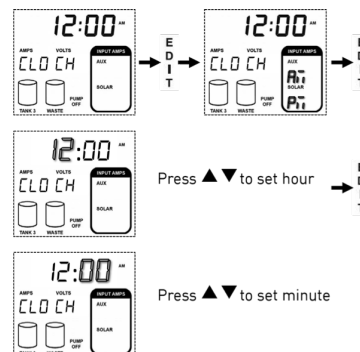


Press ▲▼ to set hour

Press ▲▼ to set minute

To configure the clock for 24-hour time:

 1. Enter Set-Up mode.
2. Navigate to the CLOCK menu function.
3. Press Edit.
4. Use the scroll arrows to change to 24hrS.
5. Press Edit.
6. Use the scroll arrows to set the hour.
7. Press Edit.
8. Use the scroll arrows to set the minute.

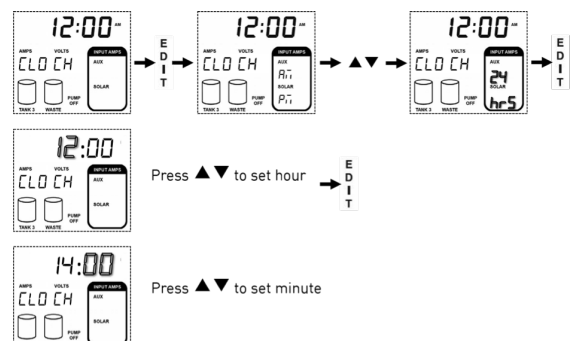

Press ▲▼ to set hour

Press ▲▼ to set minute



BM PRO

DOC PART 039106
REV 1.0

TEAM
BM PRO
.COM