


OPERATING AN RV WITH A DISPLAY

DESCRIPTION OF PARTS

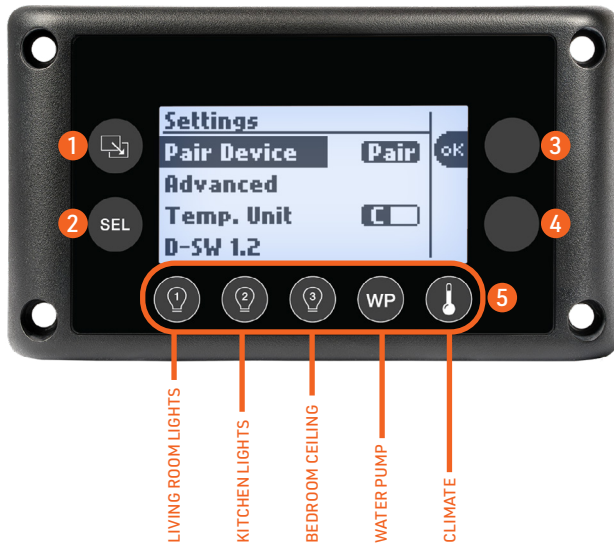

1. Page Navigation Button

Move between function screens, eg. From Tanks to Water screen.

2. Menu Navigation Button

Navigate between items within a page, e.g. in the Water page move from Pump to Elec Heater.


3-4. Action Buttons


The function for each of the action buttons changes depending on the selected menu item. These functions will be displayed on the screen, eg. OK, EXT, RET, On, Off.

5. Redundancy Buttons

Turn lights and water pump on or off. The climate button takes you to the main climate page.

DISPLAY NAVIGATION

Use the Page Navigation Button  to move from page to page.


Use the Menu Navigation Button  to move between menu items within a page.

PAIRING A SMARTPHONE TO THE NODE

The RVMaster smartphone app allows access to more features of the RV that otherwise may not be available.


Pairing your smartphone to the Node is simple. The App will guide you through the process.

The Node can be paired to the RVMaster app across a total of four devices.




1. Launch the App on your phone and choose the device installed in your RV
2. Press the Page Navigation Button  to navigate to the Settings page.
3. When "Pair Device" is highlighted, press the **OK** function button and your smartphone will begin pairing to the Node.

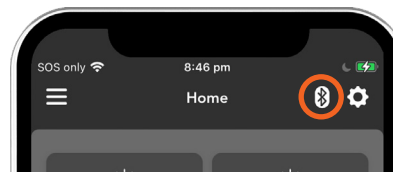

When your smartphone is paired with the Node, the Bluetooth icon is displayed on the App home screen.




PAIRING A WALL SWITCH

1. Using the  button on the Display, navigate to the **Settings** menu.
2. Using the  button on the Display, navigate down to **Advanced**.
3. In the **Advanced** setting menu, use the  button to navigate down to **Pair Switch**.
4. Press the **OK** action button to put the node into Switch pairing mode.
5. While in pairing mode, press any two buttons at the same time on the switch you want to pair.




CONFIGURING THE RV USING A SMARTPHONE

1. Identify the model of your RV.
2. In the RVMaster app, press the Settings button  to go to the **Settings** page.
3. Press the General Settings bar five times to go to the **RV Configuration** page.
4. From the RV Configuration page, select your vendor.
5. Select the model of your RV.
6. Press **Next**.
7. Select the year of your RV.
8. Press **Next**.
9. Select the floorplan of your RV.
10. Press **Next**.
11. Select any optional features of your RV.
12. Press **Next**.
13. Type the RV's serial number.
14. Press **Confirm**.
15. The RVMaster App will restart and the new configuration will be displayed.

FAULTS AND WARNINGS ON THE DISPLAY


The Display will show warnings if certain issues are detected.

Gas Heater

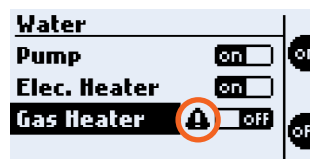


A warning will appear if the Gas Heater fails to ignite after three attempts.

AC Main

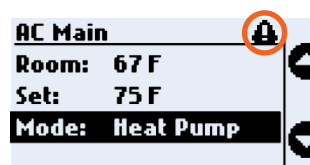

A warning will appear if there is a fault with one of the climate outputs or the temperature sensor. A sensor fault is also indicated by no room temperature value being shown, eg. -- F

Energy

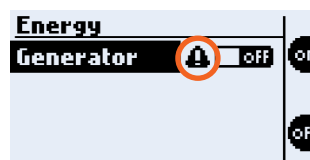

A warning will appear if the generator fault LED is actively blinking.