

# JAYCOMMAND

powered by  **BM PRO**

HELP GUIDE


## Zero Point Calibration Sequence

### JAYCOMMAND

powered by  **BM PRO**



**CONTROLLER**

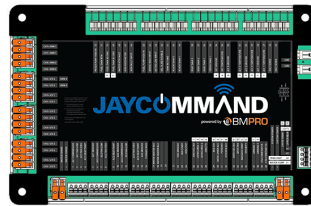

**NODE**



**APP**




**SWITCH**

**SYSTEM COMPONENTS**


This guide outlines the sequence to be followed during the Zero point calibration testing

1. Go to the Motor Settings page by pressing the "Settings" icon  in the top right of the Home Page.

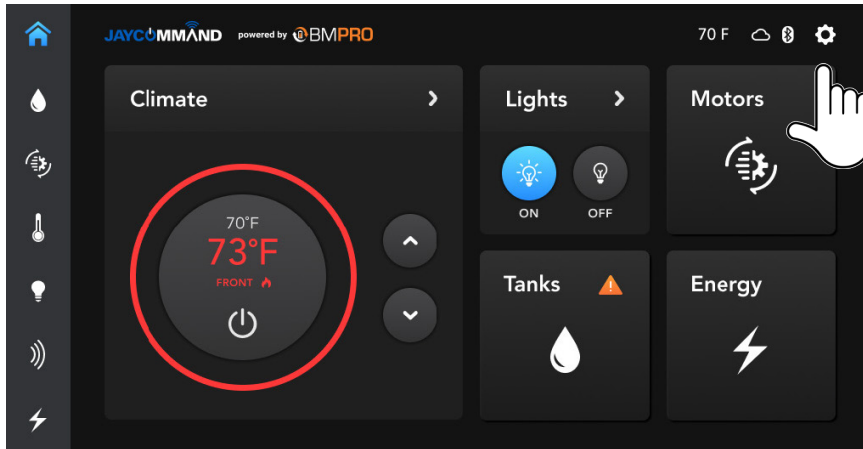


POWERING YOUR ADVENTURES.


2. Press the Motor Settings on selected models.

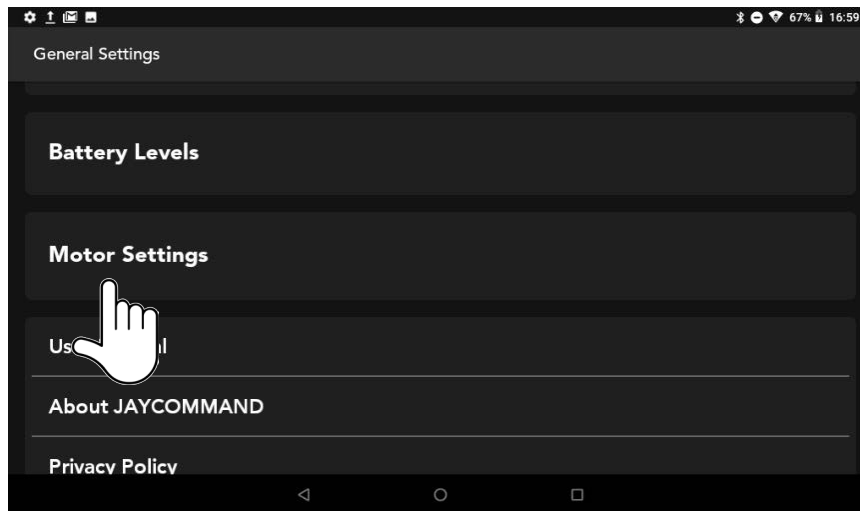

3. Put the leveler in the Zero mode by pressing and holding the "Start" button for a moment, this will be indicated by the status message "Calibration Active"

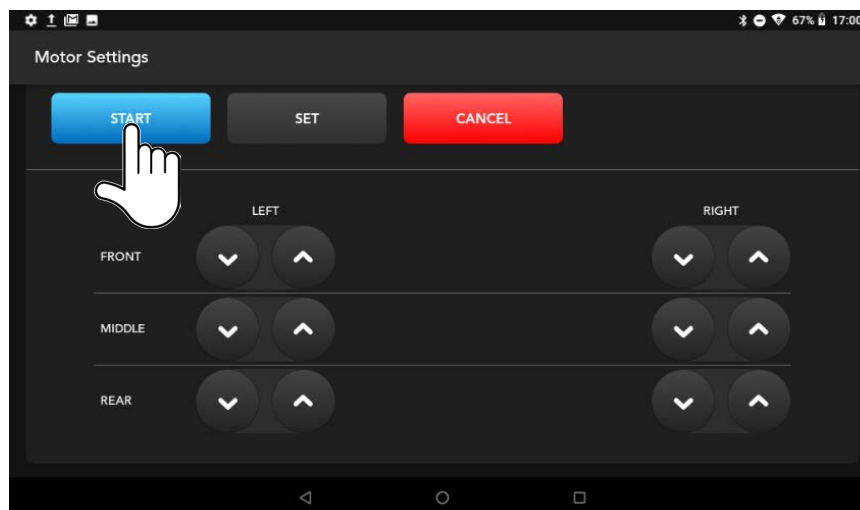


4. Move Jacks until RV is level.

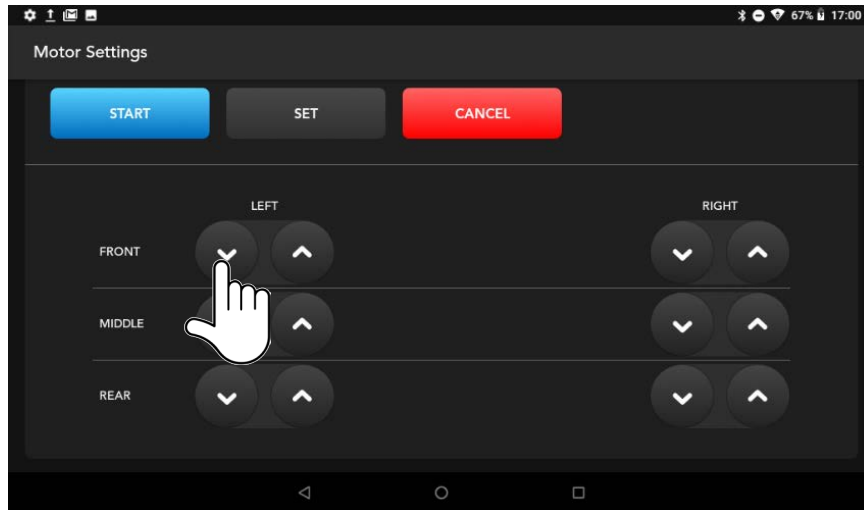

POWERING YOUR ADVENTURES.

5. Set the Zero point by pressing and holding the "SET" button

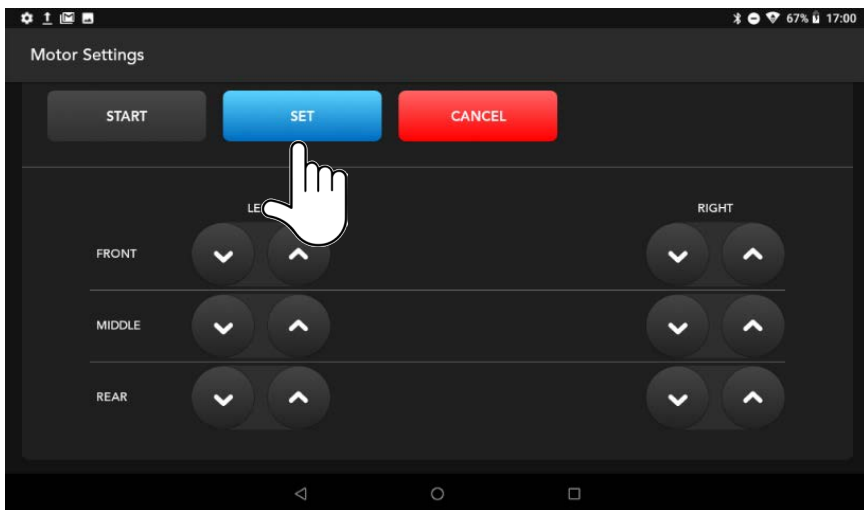

The leveler will take a few seconds to calibrate and the status will return to idle when complete.