

# PROSMART INSTALL GUIDE

ProSmart is a sensor monitor with an app to easily track multiple sensors and parameters on your adventure, whether you travel by an RV, a boat, a 4WD or an overland vehicle, giving you a wealth of information for comfort and safe travels. Monitor water levels in your fresh or grey water tanks, gas levels in your BBQ / propane bottles, tyre pressure (TPMS), temperatures in the fridge, freezer or inside your vehicle, as well as your 12V battery charge, all from an easy-to-use app on your smartphone.

#### 1. OVERVIEW

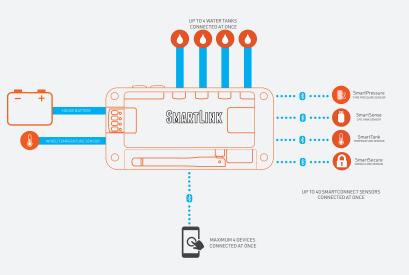

### 2. DESCRIPTION OF PARTS

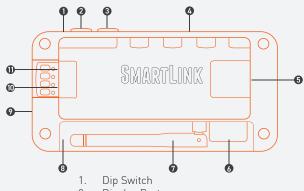

- Display Port
- 3. CAN Bus Port
- Water Tank Sensor Connections
- 5. Product Page QR Code
- Serial Number
- Antenna
- Pairing LED
- Pairing Button
- Wired Temperature Sensor Connections
- 12V Input Connection


# 3. MOUNTING

To mount the SmartLink:

- Create openings for cable connections if necessary.
- Mount the SmartLink to the wall with screws.
- 3. Make all connections.

For caravan/RV installations, mount it at a high point to avoid the metal chassis and tow bars, which can cause signal interference.

To ensure optimal antenna performance, avoid placing the SmartLink near conductive or metal objects.

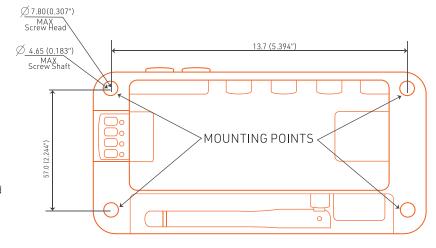

## 4.APP

Use the QR code to download the



#### 5. PAIRING

When opening the ProSmart app for the first time, you will need to pair the SmartLink. From the Welcome screen:

- Press Start.
- Press Continue.
- If required, allow access to your device's location.
- Once the Pair your SmartLink screen displays, press the pairing button on the SmartLink.




## **6. LED STATUS INDICATOR**

STATE	LED STATUS
Initialisation	Flashing white and yellow
Pairing	Flashing Blue
The maximum of four mobile devices has been reached	Flashing Amber-Green
All mobile devices have been forgotten	Single Red flash

# 7. ANALOG WATER DIPPERS

To connect an analogue dipper to your SmartLink:

- 1. At the top of the SmartLink, move pin 2 to the off position on the red dip switch.
- 2. On the bung wiring loom, connect the red wire to pin 1 of the SmartLink's water tank sensor connection.
- 3. Connect the white earth wire at the bottom of the tank to pin 5 of the SmartLink's water tank sensor connection.
- 4. Follow the analogue dipper's instructions to connect it to the water tank.



**SMARTPRESSURE** 



SMARTSENSE



**SMARTTEMP** 



**SMARTSECURE** 



